

HOW TO CHANGE THE FUNCTIONAL DESIGN OF YOUR «WING»?

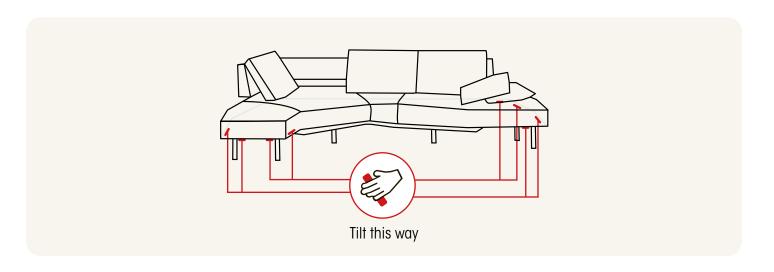

ALWAYS PROCEED IN THIS ORDER

(for any part you wish to reposition)

 
Put your hands on the provided blocks and lift the moving part slightly.

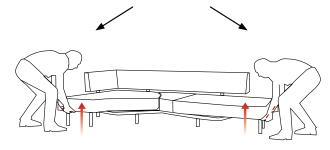

0

Put your hands on the provided plates and lift the moving part slightly.


Then pull the moving part diagonally towards you.



2

Then pull the moving part straight towards you.

Now slide the raised part of the wing, untill you hear a CLICK. When you hear the click, the wing is fixed in the desired position.

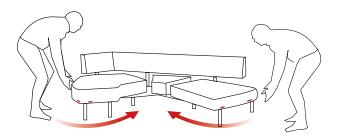

3

Now slide the raised part of the wing, untill you hear a CLICK. When you hear the click, the wing is fixed in the desired position.

To convert the wing back in open position (CORNER SOFA), carry out the movements in reversed order.

